


!! READ THIS FIRST !!

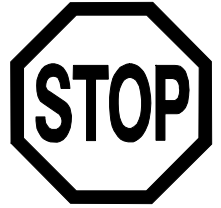

XTREME[®] Tachometer

Installation and Operation Instructions ADDENDUM

VDO Instruments


Winchester, Virginia USA

Your new Xtreme Tachometer now has **FOUR** programmable shift points! This enhanced feature requires a minor change to your Instruction Sheet.

On Page 3, bottom half, **REPLACE** Step 2 “Setting the Shift Points” with this ADDENDUM sheet.

2. Setting the Shift Points

- Press the “TACH/RPM SET” button while in normal [tach] mode. The tach pointer will move to 3000 RPM [approx.] and a dot will appear in the display to indicate “RPM SET” mode. “S-1” appears in the display itself to indicate you are about to set shift point #1.

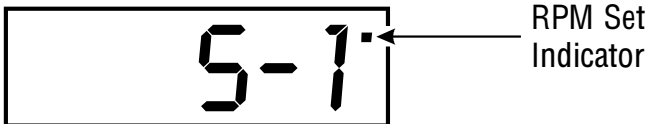

- Press the up (▲) arrow or the down (▼) arrow until the display reads your desired RPM value.
- Press “TACH/RPM SET” again to save this value. The display will show “S-2” briefly, then it will show the second shift RPM value.




Repeat the above procedure to set or change your desired second shift RPM value.

- Press “TACH/RPM SET” again to save this value. The display will now show “S-3” briefly, then it will show the third shift RPM value.



Repeat the above procedure to set your desired third shift RPM value.

- Press “TACH/RPM SET” again to save this value. The display will now show “S-4” briefly, then it will show the fourth shift RPM value.

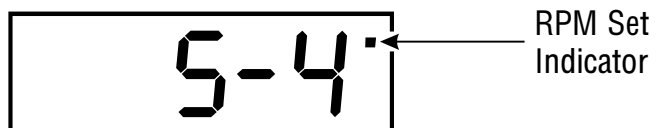

Repeat the above procedure to set your desired fourth shift RPM value.

- Press “TACH/RPM SET” again to save this value and return to the normal [tachometer] mode.

NOTE: If only one shift point is required, set the second, third and fourth shift point values to the same value as the first shift point value. If two shift points are required, set the third and fourth values the same as the second. If three shift points are required, set the fourth shift point the same as the third.