

Diagram A
Gauge Dimensions

VDO Limited Warranty

VDO North America warrants all merchandise against defects in factory workmanship and materials for a period of 24 months after purchase. This warranty applies to the first retail purchaser and covers only those products exposed to normal use or service. Provisions of this warranty shall not apply to a VDO product used for a purpose for which it is not designed, or which has been altered in any way that would be detrimental to the performance or life of the product, or misapplication, misuse, negligence or accident. On any part or product found to be defective after examination by VDO North America, VDO North America will only repair or replace the merchandise through the original selling dealer or on a direct basis. VDO North America assumes no responsibility for diagnosis, removal and/or installation labor, loss of vehicle use, loss of time, inconvenience or any other consequential expenses. The warranties herein are in lieu of any other expressed or implied warranties, including any implied warranty of merchantability or fitness, and any other obligation on the part of VDO North America, or selling dealer.

(NOTE: This is a "Limited Warranty" as defined by the Magnuson-Moss Warranty Act of 1975.)

VDO North America · 188 Brooke Rd. · P.O. Box 2897 · Winchester, VA 22603 · Phone: 540-665-2428

1 BEGIN HERE

CAUTION: Read these instructions thoroughly before making installation. Do not deviate from assembly or wiring instructions. Always disconnect battery ground before making any electrical connections. If in doubt, please contact your dealer or VDO Instruments at (540) 665-2428.

General Information:

Your VDO mechanical pressure gauge features the latest illumination technology and a rugged design to insure years of durable and reliable operation. These instruments require a tubing kit to complete installa-

tion with various engines. You may purchase such a kit (with different lengths of tubing and of different styles) from your VDO dealer.

Gauge Installation:

1. Select the location where you will mount the gauge, and mark a center point for a hole (or use a VDO Mounting Accessory [1,2, & 3 hole chrome and black] or a VDO Mounting Cup [chrome or black]).
2. Cut a 2 5/8" (65 mm) diameter hole for the pressure gauge. Place the instrument into the hole. If the gauge is too snug, use a file to slightly enlarge the opening until the gauge fits properly. See Diagram A.
4. Slip the mounting bracket over the mounting bolts on the back of the gauge. Screw on the accompanying nuts. Tighten the nuts until the gauge can no longer be rotated by hand. **DO NOT OVERTIGHTEN!**

Parts List

Item	Description	Quantity
1.	Pressure Gauge (2 5/8" [65 mm] diameter)	1
2.	Lamp Socket	1
3.	Light Bulb	1
4.	VDO Mounting Bracket and nuts	1
5.	Installation Instructions	1

CAUTION!!!

The bezel diameter is only a few millimeters larger than the gauge itself. **With that in mind, measure and precisely mark the gauge location before cutting any holes!**

Tools and Materials Needed For Installation:

- 16 Gauge stranded, insulated wire
- Insulated 1/4" spade connectors
- 2 5/8" hole saw
- Drill and drill bit set
- Half-round file
- Tape measure or ruler
- Small tools: wrench or nut driver, utility knife, pliers, etc.
- Tubing kit and various engine adapters

VDO® North America

Mechanical Pressure Gauge Installation Instructions

Instruction Sheet #0 511 011 788
Rev. 3/99

INSTRUCTIONS FOR THE INSTALLATION OF THE MECHANICAL PRESSURE GAUGE ARE CONTAINED HEREIN. USE IS RESTRICTED TO 12-VOLT NEGATIVE GROUND ELECTRICAL SYSTEMS. LIGHT BULB, IF SUPPLIED, IS 12 VOLTS.

To Begin, go to #1

2 CONTINUE HERE

Gauge Hookup and Lamp Wiring:

1. Route the tube from the gauge to the engine. DO NOT CRIMP the tubing closed during routing. A rubber grommet is recommended around the tubing where it passes through the firewall.

2. Attach one end of the tubing to the gauge using a 1/8" adapter, ferrule and sealing nut, as shown in Diagram B.

3. Attach the other end of the tubing to the engine using a 1/8" adapter, a ferrule and a sealing nut. A 1/4" adapter may be needed.

DO NOT OVERTIGHTEN THE SEALING NUTS OR YOU WILL DAMAGE THE TUBING!

4. Run the wire from the gauge lamp socket to the lighting circuit (a + 12 volt source, usually after the light switch fuse in the fuse box). See Diagram B.

At this point, installation is complete. Re-check the routing of the tube from the gauge to the engine.

Make sure the tube is absolutely free from moving and/or hot engine components, and that it is totally free of kinks.

Start the engine and turn on the lights to make sure the gauge illumination functions properly. If it doesn't, recheck your connections and your wiring. Check all tubing connections for leaks.

CAUTION:

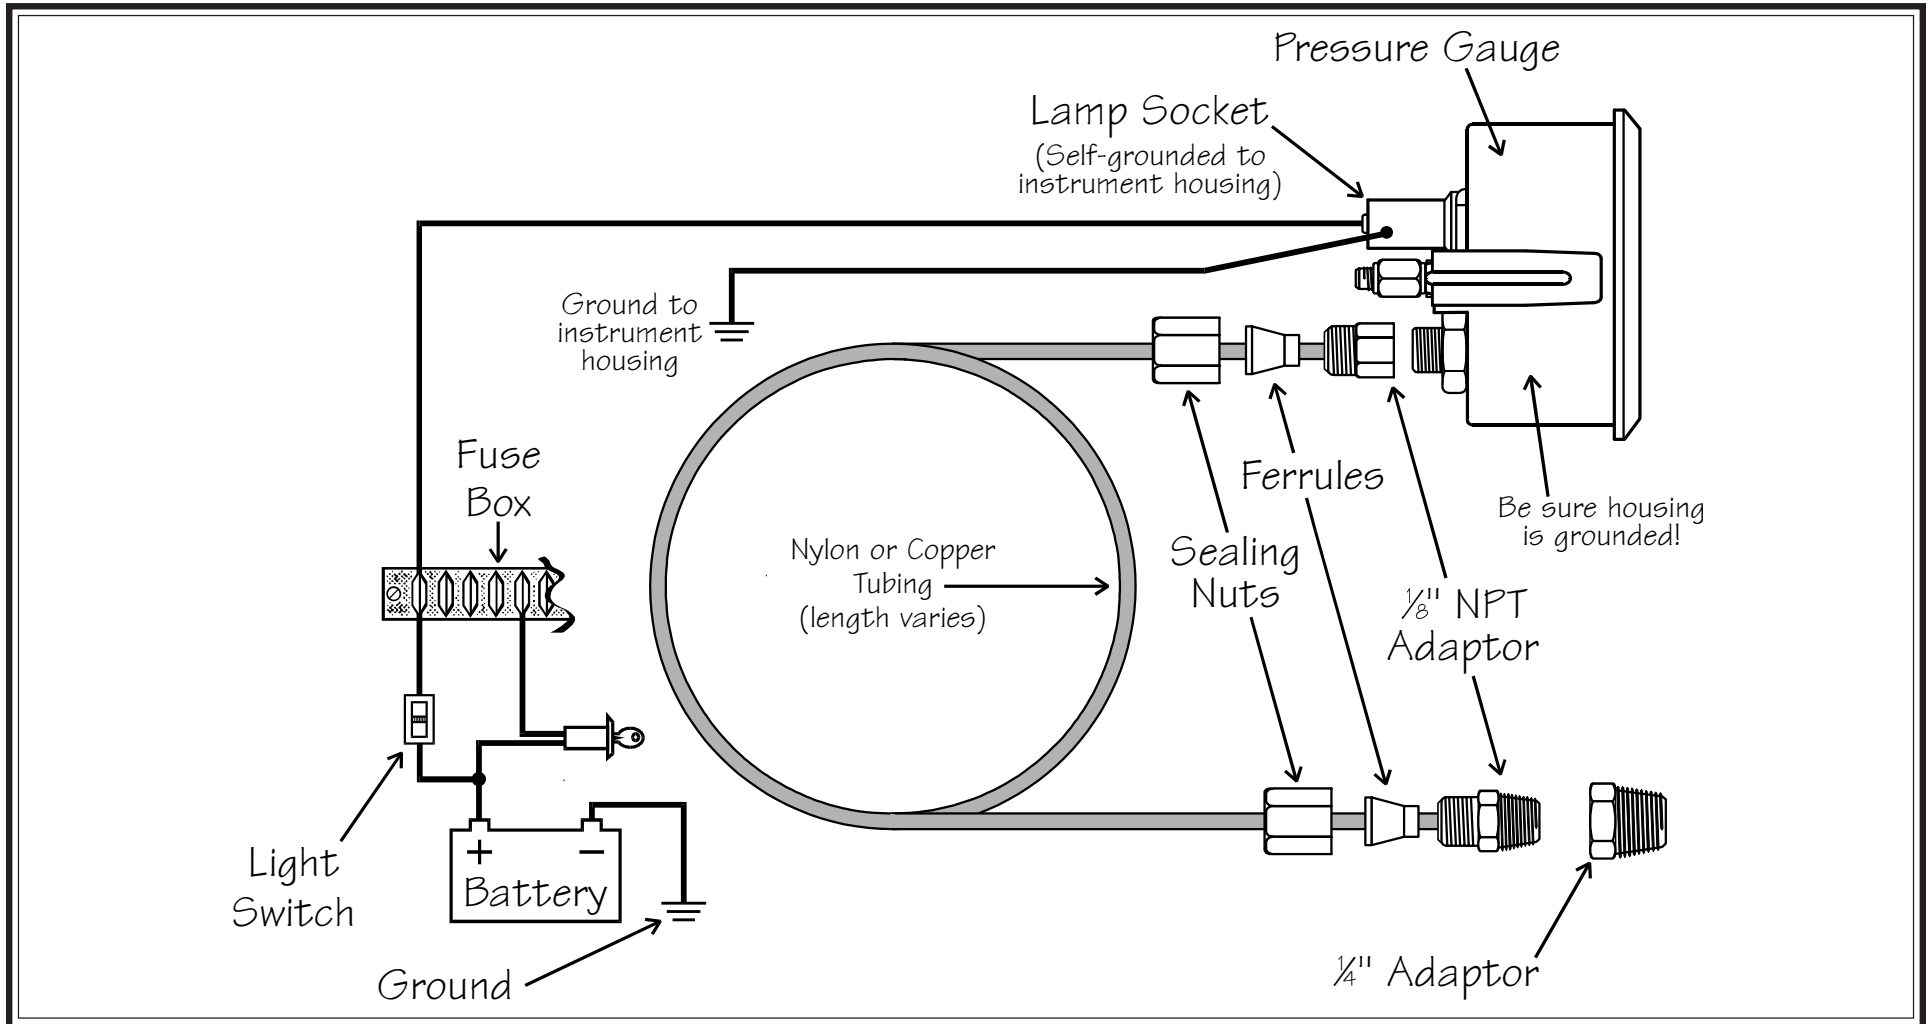


Diagram B

Gauge hookup and lamp wiring information